



## BAT DETECTOR

# ECHO METER TOUCH 2 AND 2 PRO

with USB-C for iOS® and Android™

### *Helpful product resources*

Thank you for purchasing a **Wildlife Acoustics Echo Meter Touch 2**! The Echo Meter Touch 2 is a system of software and hardware that turns your iOS or Android device into an interactive bat detector and recorder.

As you get started with your recorder, be sure to check out [wildlifeacoustics.com/resources](http://wildlifeacoustics.com/resources) for helpful product information, including:

- Video tutorials
- A searchable knowledge base
- Free virtual product training
- Product user guides

### Product Support

VISIT:

[wildlifeacoustics.com/support](http://wildlifeacoustics.com/support)

CALL:

888-733-0200 (North America)

+1-978-369-5225

GET NOTIFIED:



Sign up for Technical Support Bulletins at [wildlifeacoustics.com/mailling-list](http://wildlifeacoustics.com/mailling-list) to receive important product and firmware updates.




Record your product serial number(s) here: \_\_\_\_\_

# GET STARTED FASTER


1. Search for "Echo Meter Touch" on the App Store or Google Play and install the free app.
2. Launch the **Echo Meter** app and connect the EMT module to your phone or tablet.
3. Enable **Auto ID** for local bat species.  
*Available in US & Canada, EU & UK, Neotropics, and South Africa.*
  - Open the ☰ menu and go to **Auto ID Selection**.
  - Select your region, then select your country, state, or province.
  - Tap **Back**, then open the ☰ menu and return to **Live Mode**.
4. **Start** Live Mode and check the Listening Mode and Visual Spacing settings.

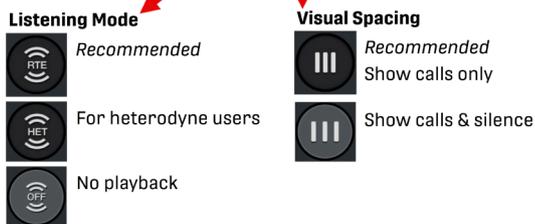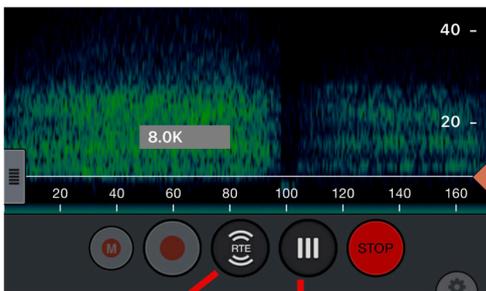

5. Open the ⚙️ Settings panel and set the
  - **Trigger Minimum Frequency** to just below the frequency of nearby bat calls.

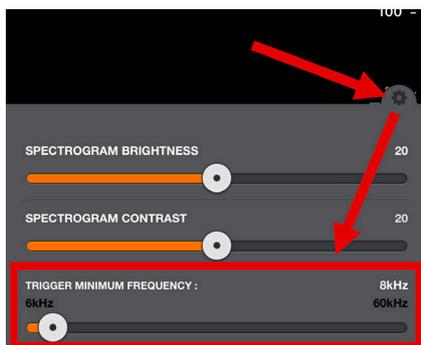


6. Tap  to enable triggered recording.

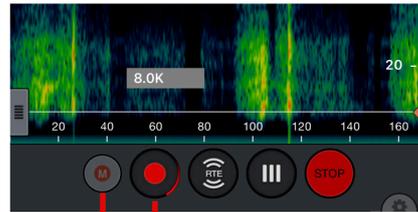

**Triggered recording**  
*Recommended for bats*

**Manual recording**  
*For continuous recordings  
(Insects, Soundscapes, etc.)*

7. When a bat flies by, the app will automatically record it, then suggest the species (if Auto ID is enabled).

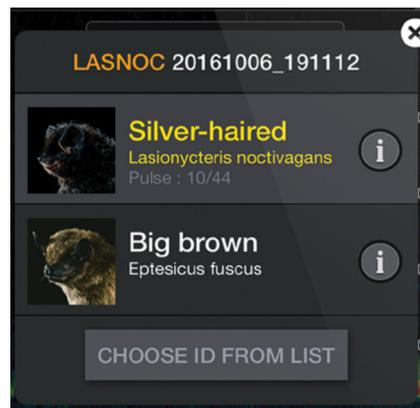

8. When done for the night, tap  again to end your session.  
*You can review your recordings under*  
 > **Recordings**